


## P2020

### Quick guide Operation




Position the peristaltic test pump at the desired operating location and place it on the floor. Plug in the electrical supply cable.

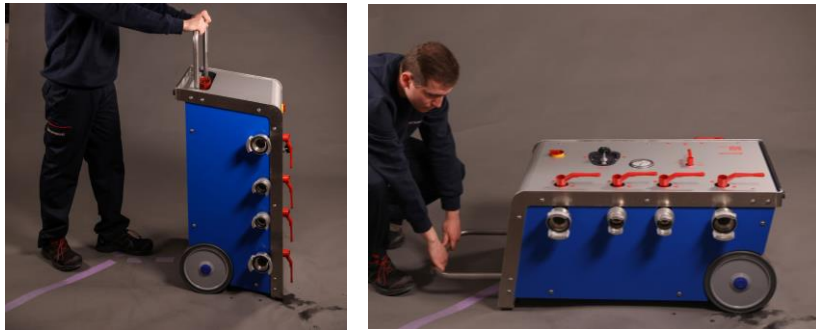


The test pump may only be operated in the horizontal position!



Close all ball valves.

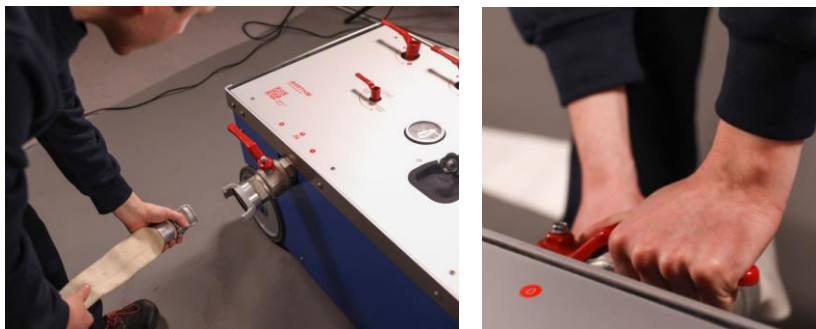

Connect the supply line hose.  
Open the ball valve for the supply line.  
Open the water supply.

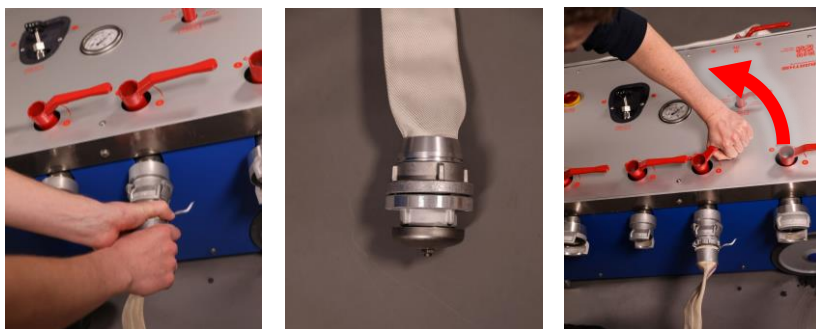


Connect the hose to be tested to the test outlet.  
Close the end of the hose with a vent valve.  
Open the ball valve at the test outlet.  
The hose fills with water.



Vent the test pump at the relief valve.  
Keep the ball valve open until water emerges from the test pump. Then set the ball valve to "Work".

## P2020

### Quick guide Operation

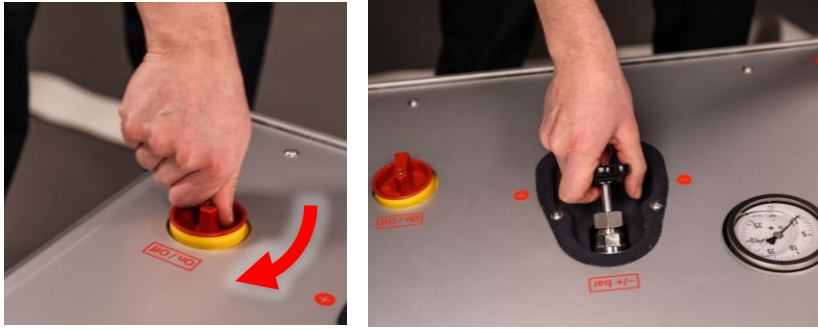

Switch on the main switch of the high-pressure pump.  
Set the desired test pressure on the rotary knob.




Allow the test time of the hose to elapse.



Switch off the main switch of the high-pressure pump.  
Close the ball valve in the supply line.



Open the relief valve to relieve pressure in the test system.

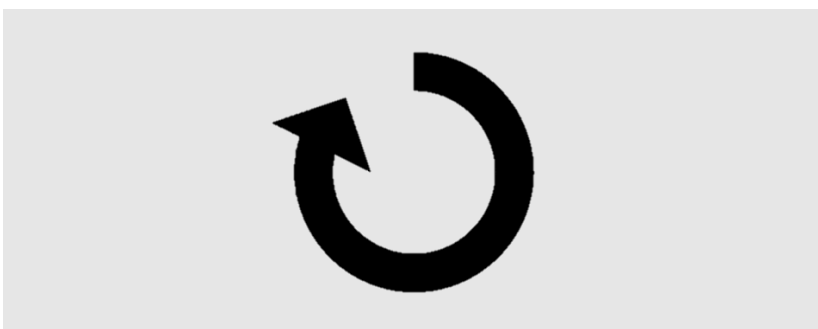

Disconnect the test hose from the system.  
Continue testing again as required.